

ADVANTAGE AIR®

MyAir3 as MASTER

Daikin A/C Unit

MyDict2-DK



Cheat Sheet

REQUIRED DAIKIN FIELD SETTINGS:

Sense temp from remote control: 20-2-03
LL mode fan when comp off heating: 22-3-01
LL mode fan when comp off cooling: 22-6-01

2014

ELECTRICIAN INSTRUCTIONS

Daikin Unit

1. Install the Daikin indoor and outdoor unit according to Daikin's instructions. Do not connect any MyAir electronics.
2. Connect up the Daikin wall controller in the roof space, there is no need to run the controller down the wall as it will be only be used to configure the system initially then it will be disconnected & removed later.
3. Test the Daikin system completely using this Daikin wall controller.
4. Once testing is complete proceed to next step (Field Settings).

Daikin Field Settings

Setup the BRC1E61 & BRCE162 Daikin Control Panel.

1. Access Field Setting options
 - a. Press and hold the Cancel Button (bottom right corner button)
 - b. Select Field setting list and press Menu/Enter. (middle round button)
2. Set temperature sensor to read from remote controller **(20-2-03)**
 - a. Select Mode 20 using the temp up & down buttons
 - b. Press the right arrow to select 2 & check it is set to 03
 - c. If not already 2-03, then use temp up/down and correct this. Press the Menu/Enter button (middle round button) to save this setting.
 - d. Select YES to the question "Is it settled by setting?"
3. Set fan to LL mode when comp OFF in heat mode **(22-3-01)**
 - a. Select Mode 22 using the temp up & down buttons
 - b. Press the right arrow to select 3 & check it is set to 01
 - c. If not already 3-01, then use temp up/down and correct this. Press the Menu/Enter button (middle round button) to save this setting.

4. Set fan to LL mode when comp OFF in cool mode **(22-6-01)**
 - a. Select Mode 22 using the temp up & down buttons
 - b. Press the right arrow to select 6 & check it is set to 01
 - c. If not already 6-01, then use temp up/down and correct this. Press the Menu/Enter button (middle round button) to save this setting.
 - d. Select YES to the question “Is it settled by setting?”
 - e. Press cancel twice to return to the main screen

MyDict2

1. Turn off the Daikin unit at the isolator.
2. Remove the Daikin wall controller from P1 & P2.
4. Connect the cable labeled “INDOOR UNIT” on MyDict2 to terminals P1 & P2 inside your Daikin Indoor unit.
5. Connect the short blue CAT5 cable supplied from the port labeled “My3CB” on the MyDict2 to the port labeled “MyDict2(or My3APP)” on the My3CB. ***NOTE: DO NOT CONNECT TO MYDICT PORT ON CONTROL BOX.**



MyAir Configuration

1. Follow MyAir 3 installation instructions to complete installation.

Troubleshooting via LED D1 on My3CB (D1 LED may not be easily visible).

***Note : Please wait one minute before checking this LED**

MyDict2 Normal operation	Green LED – 90/10 Flash	MyDict2 connected to Air Con.
MyDict2 Communication error	Green LED – 50/50 Flash	MyDict2 not connected to Air Con. -> Check cable between MyDict2 & Indoor Air Con Unit

Troubleshooting on Touch Screen

A1 Fault code on Touch Screen	MyDict2 is not connected to the Daikin unit.	Check cable between MyDict2 & Daikin unit
-------------------------------	--	---