

ADVANTAGE AIR®

MyAir3 as MASTER

Panasonic A/C Unit



Cheat Sheet

REQUIRED FIELD SETTINGS:

MENU #1 - Set remote control as master: 01 = 0001

MENU #1 - Sense temp from remote control: OA = 0001

MENU #2 - Use only remote control sensor: 32 = 0001

2013

Panasonic Unit

1. Install the Panasonic indoor and outdoor unit according to Panasonic's instructions. Do not connect any MyAir electronics.
2. Connect up the Panasonic wall controller in the roof space, there is no need to run the controller down the wall as it will be only be used to configure the system initially then it will be disconnected & removed later.
3. Test the Panasonic system completely using this Panasonic wall controller.
4. Once testing is complete proceed to next step (Field Settings).

Panasonic Field Settings

Setup the Panasonic wall controller as follows for the CZ-RTC2 Panasonic remote controller.

NOTE: There are two separate field settings menus that you need to access and change.

1. Menu 1

- a. Press and hold the MODE (Top Right) & TIMER SET buttons together on the remote controller for more than 4 seconds.
- b. Select the code you would like to change with the UP & DOWN **TEMPERATURE** buttons
- c. Change the codes value with UP & DOWN **TIMER** buttons
- d. Set the following
 - i. 01 = 0001
 - ii. OA = 0001 (**Essential for MyZone™ feature when using MyAir temperature sensors**).
- e. When you are done press the SET button
- f. Then press the SPANNER button
- g. Remote returns to main screen




2. Menu 2

- a. Press and hold the SPANNER, SET & CANCEL buttons together on the remote controller for more than 4 seconds.
- b. Select Code 32 using the UP & DOWN **TEMPERATURE** buttons
- c. Change the value to 0001 using the UP & DOWN **TIMER** buttons
- d. When you are done press the SET button
- e. Press the SPANNER button
- f. Remote returns to main screen

MyDict

1. Turn off the Panasonic unit at the isolator. (THIS STEP IS IMPORTANT TO APPLY THE FIELD SETTINGS)
2. **Remove** (disconnect) the Panasonic remote controller from R1 & R2.
3. Set the dipswitches on your MyDict as per below.

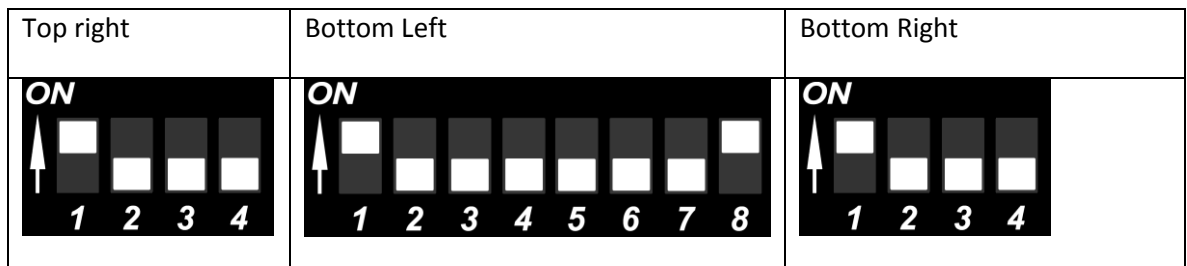

4. Connect the cable coming from the top of the MyDict to terminals R1 & R2 inside your Panasonic fan coil unit.
5. Connect the cable coming from the bottom of the MyDict to the MyAir3 control box

MyAir 3

1. Follow the MyAir 3 instructions to complete the installation

Troubleshooting

MyDict Normal operation	Yellow LED – Short Flash, Long OFF	Operation Normal
MyDict Communication error	Yellow LED – 50/50 Flash	Check cable between MyDict & FCU or check dipswitch settings
Unit Turns OFF immediately on MyAir screen.	When power is pressed via MyAir3 buttons turns yellow then immediately turns black (OFF)	Check unit controller is connected; check removable green screw terminal on MyDict is pressed down firmly. Check MyDict dip switches.